





Networked PIP Series Reference Manual

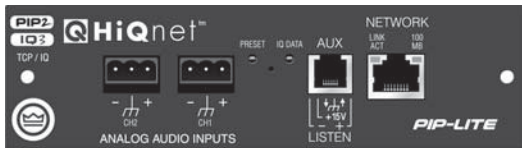

PIP - LITE

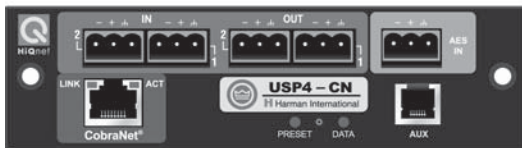

PIP - USP4-CN

Network Programmable Input Processors with HiQnet™, TCP/IQ™, SmartAmp™ Features, Load Supervision for Crown PIP2™-Compatible Amplifiers, and CobraNet™ Connectivity (USP4-CN only)

Obtaining Other Language Versions: To obtain information in another language about the use of this product, please contact your local Crown Distributor. If you need assistance locating your local distributor, please contact Crown at 574-294-8000.

This manual does not include all of the details of design, production, or variations of the equipment. Nor does it cover every possible situation which may arise during installation, operation or maintenance. If special assistance is needed beyond the scope of this manual, or the software online help, please contact the Crown Technical Support Group.

The information provided in this manual was deemed accurate as of the publication date. However, updates to this information may have occurred. To obtain the latest version of this manual, please visit the Crown website at www.crownaudio.com.

Trademark Notice: Crown, Crown Audio, Amcron, Com-Tech, Macro-Tech, IQ and IQ System are registered trademarks of Crown International. TCP/IQ, SmartAmp, IQ2, PIP and PIP2 are trademarks of Crown International. HiQnet is a trademark of Harman International Industries, Inc. Other trademarks are the property of their respective owners.

Some models may be exported under the name Amcron®.

©2009 by Crown Audio® Inc., 1718 W. Mishawaka Rd., Elkhart, Indiana 46517-9439 U.S.A.
Telephone: 574-294-8000



H Harman International

136763-7 9/09

Crown Technical Support

1718 W. Mishawaka Rd., Elkhart, Indiana 46517-9439 U.S.A.

Phone: **800-342-6939** (North America, Puerto Rico and Virgin Islands) or 574-294-8200

Fax: 574-294-8301 Internet: <http://www.crownaudio.com>



WATCH FOR THESE SYMBOLS. The exclamation point triangle is used to alert the user to important operating or maintenance instructions.



The lightning bolt triangle is used to alert the user to the risk of electric shock.

This product complies with CISPR22 Emissions standard, EN55103-1 Emissions standard, and EN55103-2 Immunity standard.



WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE!

FCC COMPLIANCE NOTICE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DECLARATION of CONFORMITY

Harman International
1718 W. Mishawaka Rd.
Elkhart, IN 46517 U.S.A.

FOR COMPLIANCE QUESTIONS ONLY: Susan Whitfield
574-294-8289
sue.whitfield@harman.com

European Representative's Name and Address:

David Budge
10 Harvest Close
Yateley GU46 6YS
United Kingdom

Equipment Type: Control System Components

Family Name: PIP

Model Name: PIP-Lite, PIP-USP4-CN

EMC Standards:

EN 55103-1:1997 Electromagnetic Compatibility – Product Family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control Apparatus for Professional Use, Part 1: Emissions

EN 55103-1:1997 Magnetic Field Emissions-Annex A @ 10 cm and 1 M

EN 61000-3-3:1998 Limitation of Voltage Fluctuations and Flicker in Low-Voltage Supply Systems Rated Current ≤16A

EN 55022:2006 Limits and Methods of Measurement of Radio Disturbance Characteristics of ITE: Radiated, Class B Limits; Conducted, Class B

EN 55103-2:1997 Electromagnetic Compatibility – Product Family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control Apparatus for Professional Use, Part 2: Immunity

EN 61000-4-2:2001 Electrostatic Discharge Immunity (Environment E2-Criteria B, 4k V Contact, 8k V Air Discharge)

EN 61000-4-3:2006 Radiated, Radio-Frequency, Electromagnetic Immunity (Environment E2, criteria A)

EN 61000-4-4:2007 Electrical Fast Transient/Burst Immunity (Criteria B)

EN 61000-4-5:2006 Surge Immunity (Criteria B)

EN 61000-4-6:1996 Immunity to Conducted Disturbances Induced by Radio-Frequency Fields (Criteria A)

EN 61000-4-11:2004 Voltage Dips, Short Interruptions and Voltage Variation

Safety Standard:

IEC 60065: 2001 + AMP1: 2005 Safety Requirements – Audio Video and Similar Electronic Apparatus

I certify that the product identified above conforms to the requirements of the EMC Council Directive 89/335/EEC as amended by 92/31/EEC, and the Low Voltage Directive 73/23/EES as amended by 93/68/EEC.

Signed 
Andrew Stump
Title: Director of Manufacturing

Date of Issue: December 1, 2009

Quick Install Procedure

This procedure is provided for those who would like to install the PIP card in the shortest time possible and are already familiar with Harman Pro System Architect and HiQnet. A more complete installation procedure is outlined in the installation section.

Prepare the amplifier:



1. Turn down the level controls of the amplifier and turn off the amplifier.
2. Unplug the power cord from the AC mains.
3. Remove the existing PIP or cover from the amplifier back panel (two screws).
4. On the PIP-USP4-CN, make sure that the input sensitivity switches located inside the amplifier are in the 26dB mode (middle) position for both, channel 1 and 2.

Install the PIP module into the amplifier:

5. Carefully ground yourself to the chassis of the amplifier before installing the PIP card. It is a good idea to maintain ground contact between yourself and the amplifier while inserting the module into the amplifier in the next step.
6. Position the PIP module so the ribbon cable connectors located along the back edge on the underside of the module can be clearly seen. Attach the ribbon cables from the amplifier to the ribbon-cable connectors. For **PIP-Lite**, the 20 pin cable (A) should go to the connector closest to the corner (J2A) and the 18 pin cable (B) should go to the other connector. For **PIP-USP4-CN**, make sure to install the supplied ferrite core to the 18 pin cable (B) before connecting. The 20 pin cable (A) should go to the connector further inside and away from the corner (AJ9), and the 18 pin cable should connect to the one closest to the corner (BJ5).



Important: Be careful when attaching the ribbon cable to the connector. Applying pressure to an improperly seated connector could cause the keying tabs, which ensure proper pin alignment, to break. Connecting the ribbon cables with improper pin alignment will likely result in damage to the PIP.

7. With both cables firmly attached, turn the PIP back to an upright position. Verify that the cables run untwisted between the amplifier and the PIP. Insert the PIP into the amplifier while taking care not to crimp, pinch or stretch the ribbon cables.
8. Tighten the two PIP mounting screws until it is secured to the amplifier back panel, making sure the supplied star-washers contact the PIP panel for a good ground connection.
9. Make sure the amplifier is left in Dual mode – Bridging is done via software (USP4-CN only)

Install the wiring:

10. Connect the PIP to the Ethernet network used for control. Each PIP must connect to its own port on a 100 Megabit Ethernet Switch with a standard straight CAT5 network cable. A 10 Megabit connection will work with the PIP-Lite but is not recommended for systems with a high number of components. A 10 Megabit connection will not work with the PIP-USP4-CN.
11. Connect the amplifier back to the AC mains and reset the back panel input attenuators to the proper levels. For the USP4-CN the input attenuators should be set to wide open, no attenuation for all the features to function properly.

Controls, Indicators and Connectors

PIP-Lite

A. Balanced Audio Input Connectors

3-pin removable barrier-strip connectors, one per channel.

B. Preset Indicator

Signals the number of the current preset, if active, by flashing a series of flashes equal to the current preset number.

C. Reset/Preset Switch

Used to change presets, restore settings to factory default or restore all the presets to the factory defaults. During operations of the switch, the Data indicator flashes as an aid to the user.

D. Data Indicator

Flashes when the PIP-Lite receives a valid command that is addressed to the PIP-Lite.


E. AUX Connector

AUX input, AUX output, and Listen Bus/Foldback.

F. Network Connector

The network connector is a standard RJ-45 connector that allows the PIP-Lite to connect to an Ethernet network. Connection is made using a standard Category 5 or better cable to a network switch port. For compliance with emission regulations, the supplied ferrite core must be placed on the CAT5 cable, with the cable making two passes through the core as shown in the figure below. The Link Activity LED indicates data activity on the network line. The 100 MB LED indicates that the data is at 100 Megabits.

G. Mounting Holes

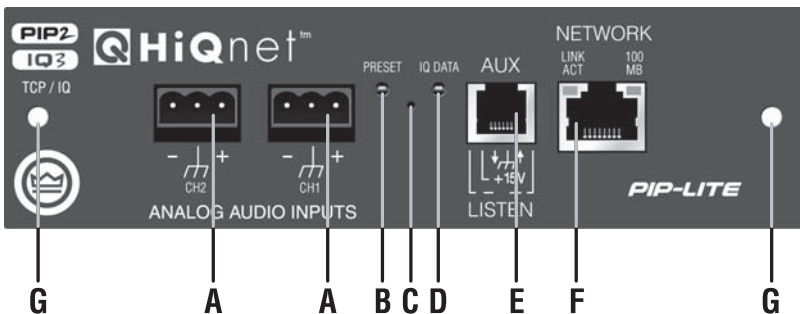

PIP-Lite Controls, Indicators and Connectors
(Note: Actual Product Artwork May Vary Slightly)

PIP-USP4-CN
A. Balanced Analog Audio Input Connector

3-pin removable barrier-strip connectors.

B. Balanced Analog Audio Output Connector

3-pin removable barrier-strip connectors.

C. AES Digital Audio

3-pin removable barrier-strip connectors.

D. Network Connector

RJ-45 connector for HiQnet control and CobraNet Digital Audio to a 100Mb Ethernet Network.

E. AUX Connector

AUX input or AUX output. Foldback is available through CobraNet.

F. Preset Indicator


LED flashes to signal the number of the current preset. LED is green if the preset values have not been changed once loaded. LED is yellow if the preset values have been changed since they were loaded.

G. Reset/Preset Switch

Used to change presets, restore settings to factory default or restore all the presets to the factory defaults. During operations of the switch, the Data indicator flashes as an aid to the user.

H. Data Indicator

Flashes when the PIP module receives a valid command that is addressed to the USP4-CN.

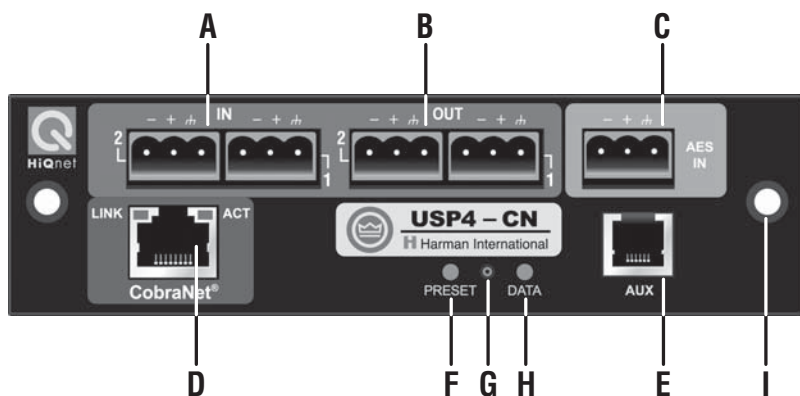I. Mounting Holes


*PIP-USP4-CN Controls, Indicators and Connectors
(Note: Actual Product Artwork May Vary Slightly)*

Installation

Before beginning, please carefully note:



CAUTION: STATIC ELECTRICITY MAY DAMAGE THE UNIT. Use caution when handling the unit. Carefully ground yourself BEFORE touching the unit. Avoided unnecessary touching the components or solder pads on the circuit board. It is best to handle the unit by its front panel only.

Prepare the PIP

The PIP comes ready to install in the amplifier. This unit does not require setting the “IQ address” as the older current loop, Crown bus, units did. Each PIP (as well as all network components) comes preprogrammed with a unique network (MAC) address. The HiQnet address is then set (automatically or manually) via SystemArchitect control software (TCP/IP network address).

Prepare the Amplifier

Turn down the amplifier level controls (full counterclockwise) and turn off the amplifier.



Disconnect the amplifier’s power cord.

Remove the existing PIP module from the amplifier back panel (two screws).




Install the PIP into the Amplifier.

Carefully ground yourself to the chassis of the amplifier before installing the PIP, it is a good idea to maintain ground contact between yourself and the amplifier while inserting the module into the amplifier.

Prepare the Cables



Before using the AUX port, and after the **PIP-Lite** module has been installed into the amp, make sure to pass the CAT5 cable twice through the supplied ferrite core.

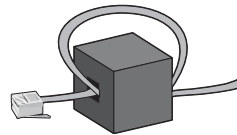


Important: On CTs3000 and CTs2000 models, make sure to add the supplied ribbon cable ferrite core to the end of the B cable before connecting to the PIP module. Its location will be similar to the ferrite on the A cable, with ½ to 1 inch of cable between the connector and ferrite core. The core is not required on CTs600 and CTs1200 amplifiers.

Before using the PIP-USP4-CN, after it is installed into the amp, make sure to use ferrite cores for cables connecting to the Analog, AES, AUX and Network ports as follow:

 
1. Pass all the Analog Input and Output cables through a ferrite core (one time).
2. Pass the AES, AUX and Network cables three (3) times through a ferrite core. Use a separate core for each the cables.

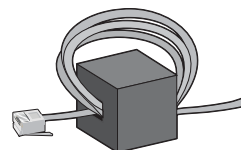


Rotate PIP Module 180° 

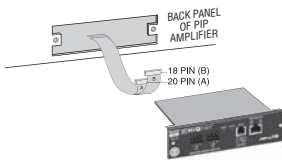


Plug In CABLE A

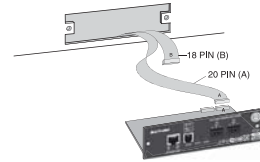


Plug In CABLE B

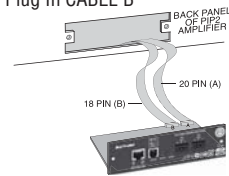

Rotate PIP Module 180°
In Opposite Direction 

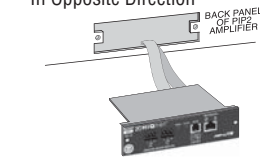

Slide PIP Into Amplifier

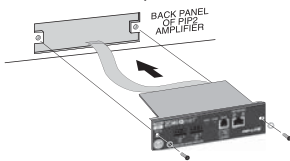

Connect the PIP-Lite Module to the Amplifier

1. Turn the PIP module upside down so the ribbon cable connectors located along the back edge on the underside of the module can be clearly seen.
2. Attach the ribbon cables from the amplifier to the ribbon-cable connectors. The 20-pin cable (A) should connect to the connector (J2A) closest to the corner and the 18 pin cable (B) should connect to the other connector.

Important: Be careful when attaching the ribbon cable to the connector. Don't pull cables out if they are short. Applying pressure to an improperly seated connector could cause the keying tabs, which ensure proper pin alignment, to break. Connecting the ribbon cables with improper pin alignment will likely result in damage to the PIP module.



Mount the PIP Module in the Amplifier

1. With both cables firmly attached, turn the PIP to an upright position. Verify that the cables run untwisted between the amplifier and the PIP module.
2. Insert the PIP module into the amplifier while taking care not to crimp, pinch or stretch the ribbon cables.
3. Fasten the PIP module to the amplifier rear panel with the two supplied mounting screws. Be sure to use the supplied star-washers for a good ground connection.

Connect the PIP-USP4-CN module to the amplifier

(**Note:** PIP-USP4-CN only works with CTS 2-Channel models).

1. Turn the PIP module upside down so the ribbon cable connectors located along the back edge of the module can be clearly seen.
2. Add the supplied ribbon cable ferrite core to the end of the (B) cable.
3. Attach the ribbon cables from the amplifier to the ribbon-cable connectors. The 20 pin cable (A) should connect to the connector further inside and away from the corner (AJ9) and the 18 pin cable should connect to the one closest to the corner (BJ5). Start by connecting cable B.

Important: Be careful when attaching the ribbon cable to the connector. Don't pull cables out if they are short. Applying pressure to an improperly seated connector could cause the keying tabs, which ensure proper pin alignment, to break. Connecting the ribbon cables with improper pin alignment will likely result in damage to the PIP module.




4. Set amplifier sensitivity to 26dB, by placing both sensitivity switches in the center position.
5. The Bridge-Mono Mode is set via software, leave the Mode switch in Dual and set the attenuator knobs to full clockwise, wide open, for all the features of the USP4 to function correctly.

Mount the PIP module in the amplifier

1. With both cables firmly attached, turn the PIP to an upright position. Verify that the cables run untwisted between the amplifier and the PIP module. For best fit, bend the cables up and roll in the cores between the two circuit boards of the PIP module.
2. Insert the PIP module into the amplifier while taking care not to crimp, pinch or stretch the ribbon cables.
3. Fasten the PIP module to the amplifier rear panel with the two supplied mounting screws. Be sure to use the supplied star-washers for a good ground connection.


Rotate PIP Module 180° 

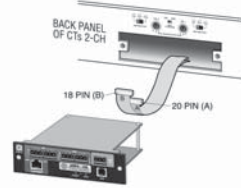


Install Ferrite Core




Plug In CABLE B

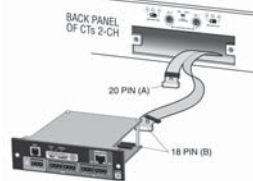

Plug In CABLE A

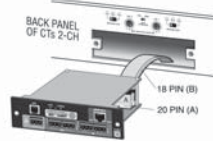


Rotate PIP Module 180°  In Opposite Direction

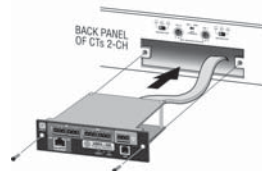

Wiring Instructions

1. **PIP-Lite ONLY:** Using a standard CAT5 cable, connect the network connector to a 100 Mb port on an Ethernet switch that is used to form the control network. If the PIP module is not to be connected to a control network, it can be temporarily connected to a computer's Ethernet port with a crossover cable (TX and RX pairs switched) to set up the PIP module for desired operation.

PIP-USP4-CN ONLY: Using a standard CAT5 cable, connect the network port to a 100Mb port on the Ethernet switch that is used to form the CobraNet network. We highly recommend that the CobraNet be a standalone or separate-network LAN. If network redundancy is required, please reference Crown's Audio Redundancy document. HiQnet control is also available over the CobraNet network using Harman Pro System Architect software.

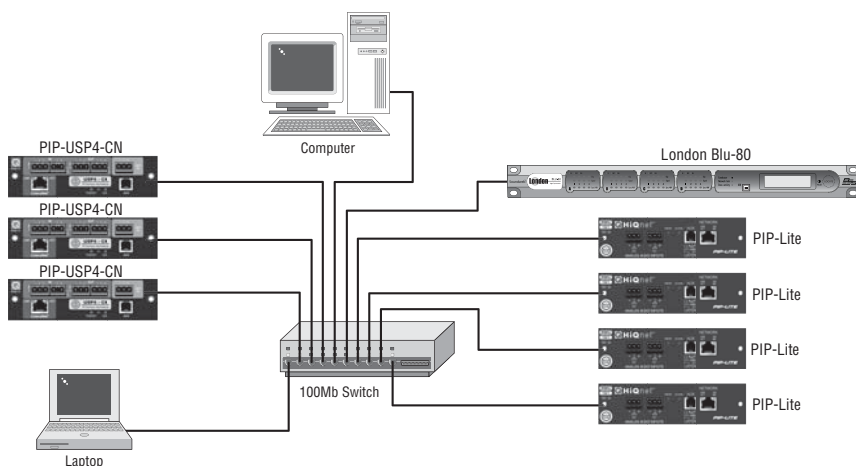

Network Wiring

2. Connect the Audio Input Wiring. The PIP module is equipped with removable barrier block connectors for each channel's input. The USP4-CN allows the use of standard balanced audio inputs to act either as CobraNet backup, an emergency override of CobraNet audio, or as an audio input to the CobraNet network. The removable barrier block connectors allows both audio channels to be inserted into the USP4-CN, then routed via software control.
3. Connect the AUX wiring if used.
4. Reconnect the amplifier's power cord.

Advanced Features and Options

Using the AUX Connector

The AUX connector offers a means to tap some of the flexibility of the Harman Pro System Architect. It can be used to enable peripherals, send a signal to another system component, and send a line-level audio signal of the amplifier's output.


The AUX connector is an RJ-11 type. Pins 3 and 4 are used as a control output. Pins 2 and 3 function as a control input. Pin 5 is a voltage supply pin for use with the control input.

AUX Input

In its basic input mode, the AUX input allows an external input source to be detected by the software. This input can be a temperature sensor, door closure switch, or operator pushbutton. It can be used by the software to change configuration settings on any or all system devices. See the Harman Pro System Architect Help files for exact information.

Pin 4 of the AUX connector is a power-supply pin designed for use by the AUX input pin. Since the AUX input floats low, the AUX input can be triggered by just a simple switch closure between it and the AUX power pin. No external power supply is needed to operate the AUX input under most conditions. If the AUX input is used to sense an externally supplied voltage it must be scaled so that low inputs are between 0 and 1.6 VDC, and high inputs are between 4 and 15 VDC. Externally supplied voltages should be referenced to AUX ground on pin 3.


Both, the PIP-Lite and the PIP-USP4-CN feature AUX input enhance modes. The PIP-Lite and the USP4-CN supports seven modes. The first six modes allow the AUX input to mute or power-down either or both channels; the seventh allows for incrementing the preset. The AUX Input Inversion Control allows either a high or low AUX input to activate these functions. These modes can be used for emergency mute for a fire alarm system. A simple switch closure from the alarm system would disable an entire sound system when a fire alarm is activated.

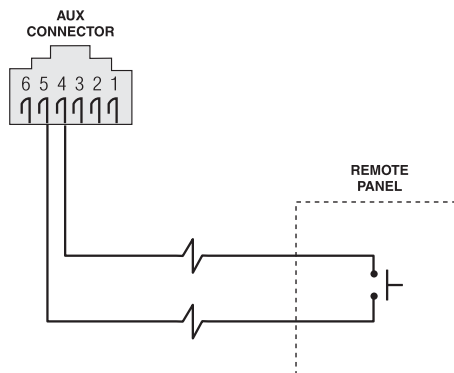

Wiring a Remote Preset Selector


PIP-Lite AUX Output

On the PIP-Lite, the AUX output provides a +15 VDC output, current limited to 10 mA, which can be switched ON or OFF under software control. Pins 1 and 6 support the Listen Bus or Foldback feature. In its basic mode, the AUX output can be used to control auxiliary equipment. To control AC-line-powered equipment the AUX output must actuate a larger relay. The relay would then turn on the auxiliary equipment.

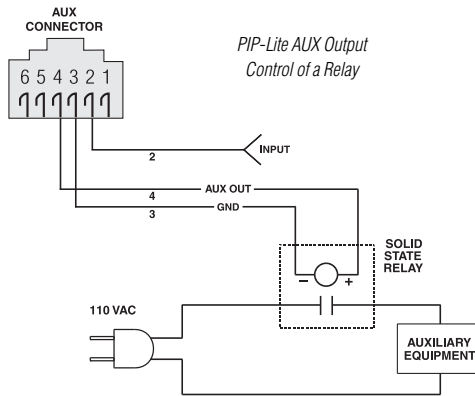

PIP-USP4-CN AUX Output

The AUX output on USP4-CN provides a relay rated at 1A / 30 VDC, which can be switched ON or OFF under software control. In its basic mode, the AUX output can be used to control auxiliary equipment. To control AC-line-powered equipment the AUX output must actuate a larger relay. The relay would then turn on the auxiliary equipment.

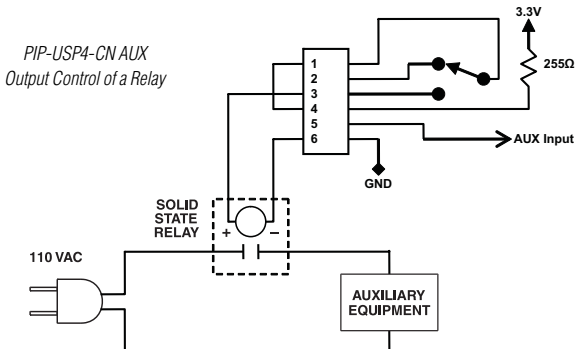

WARRANTY



UNITED STATES & CANADA

SUMMARY OF WARRANTY

Crown International, 1718 West Mishawaka Road, Elkhart, Indiana 46517-4095 U.S.A. warrants to you, the ORIGINAL PURCHASER and ANY SUBSEQUENT OWNER of each NEW Crown product, for a period of three (3) years from the date of purchase by the original purchaser (the "warranty period") that the new Crown product is free of defects in materials and workmanship. We further warrant the new Crown product regardless of the reason for failure, except as excluded in this Warranty.

Warranty is only valid within the country in which the product was purchased.

ITEMS EXCLUDED FROM THIS CROWN WARRANTY

This Crown Warranty is in effect only for failure of a new Crown product which occurred within the Warranty Period. It does not cover any product which has been damaged because of any intentional misuse, accident, negligence, or loss which is covered under any of your insurance contracts. This Crown Warranty also does not extend to the new Crown product if the serial number has been defaced, altered, or removed.

WHAT THE WARRANTOR WILL DO

We will remedy any defect, regardless of the reason for failure (except as excluded), by repair, replacement, or refund. We may not elect refund unless you agree, or unless we are unable to provide replacement, and repair is not practical or cannot be timely made. If a refund is elected, then you must make the defective or malfunctioning product available to us free and clear of all liens or other encumbrances. The refund will be equal to the actual purchase price, not including interest, insurance, closing costs, and other finance charges less a reasonable depreciation on the product from the date of original purchase. Warranty work can only be performed at our authorized service centers or at the factory. Warranty work for some products can only be performed at our factory. We will remedy the defect and ship the product from the service center or our factory within a reasonable time after receipt of the defective product at our authorized service center or our factory. All expenses in remedying the defect, including surface shipping costs in the United States, will be borne by us. (You must bear the expense of shipping the product between any foreign country and the port of entry in the United States including the return shipment, and all taxes, duties, and other customs fees for such foreign shipments.)

HOW TO OBTAIN WARRANTY SERVICE

You must notify us of your need for warranty service within the warranty period. All components must be shipped in a factory pack, which, if needed, may be obtained from us free of charge. Corrective action will be taken within a reasonable time of the date of receipt of the defective product by us or our authorized service center. If the repairs made by us or our authorized service center are not satisfactory, notify us or our authorized service center immediately.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES

YOU ARE NOT ENTITLED TO RECOVER FROM US ANY INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE NEW CROWN PRODUCT. THIS INCLUDES ANY DAMAGE TO ANOTHER PRODUCT OR PRODUCTS RESULTING FROM SUCH A DEFECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WARRANTY ALTERATIONS

No person has the authority to enlarge, amend, or modify this Crown Warranty. This Crown Warranty is not extended by the length of time which you are deprived of the use of the new Crown product. Repairs and replacement parts provided under the terms of this Crown Warranty shall carry only the unexpired portion of this Crown Warranty.

DESIGN CHANGES

We reserve the right to change the design of any product from time to time without notice and with no obligation to make corresponding changes in products previously manufactured.

LEGAL REMEDIES OF PURCHASER

THIS CROWN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. No action to enforce this Crown Warranty shall be commenced after expiration of the warranty period.

THIS STATEMENT OF WARRANTY SUPERSEDES ANY OTHERS CONTAINED IN THIS MANUAL FOR CROWN PRODUCTS. 9/07

WARRANTY**WORLDWIDE EXCEPT USA & CANADA****SUMMARY OF WARRANTY**

Crown International, 1718 West Mishawaka Road, Elkhart, Indiana 46517-4095 U.S.A. warrants to you, the ORIGINAL PURCHASER and ANY SUBSEQUENT OWNER of each NEW Crown1 product, for a period of three (3) years from the date of purchase by the original purchaser (the "warranty period") that the new Crown product is free of defects in materials and workmanship, and we further warrant the new Crown product regardless of the reason for failure, except as excluded in this Warranty.

Warranty is only valid within the country in which the product is purchased.

1 Note: If your unit bears the name "Amcron," please substitute it for the name "Crown" in this warranty.

ITEMS EXCLUDED FROM THIS CROWN WARRANTY

This Crown Warranty is in effect only for failure of a new Crown product which occurred within the Warranty Period. It does not cover any product which has been damaged because of any intentional misuse, accident, negligence, or loss which is covered under any of your insurance contracts. This Crown Warranty also does not extend to the new Crown product if the serial number has been defaced, altered, or removed.

WHAT THE WARRANTOR WILL DO

We will remedy any defect, regardless of the reason for failure (except as excluded), by repair, replacement, or refund. We may not elect refund unless you agree, or unless we are unable to provide replacement, and repair is not practical or cannot be timely made. If a refund is elected, then you must make the defective or malfunctioning product available to us free and clear of all liens or other encumbrances. The refund will be equal to the actual purchase price, not including interest, insurance, closing costs, and other finance charges less a reasonable depreciation on the product from the date of original purchase. Warranty work can only be performed at our authorized service centers. We will remedy the defect and ship the product from the service center within a reasonable time after receipt of the defective product at our authorized service center.

HOW TO OBTAIN WARRANTY SERVICE

You must notify your local Crown importer of your need for warranty service within the warranty period. All components must be shipped in the original box. Corrective action will be taken within a reasonable time of the date of receipt of the defective product by our authorized service center. If the repairs made by our authorized service center are not satisfactory, notify our authorized service center immediately.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES

YOU ARE NOT ENTITLED TO RECOVER FROM US ANY INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE NEW CROWN PRODUCT. THIS INCLUDES ANY DAMAGE TO ANOTHER PRODUCT OR PRODUCTS RESULTING FROM SUCH A DEFECT.

WARRANTY ALTERATIONS

No person has the authority to enlarge, amend, or modify this Crown Warranty. This Crown Warranty is not extended by the length of time which you are deprived of the use of the new Crown product. Repairs and replacement parts provided under the terms of this Crown Warranty shall carry only the unexpired portion of this Crown Warranty.

DESIGN CHANGES

We reserve the right to change the design of any product from time to time without notice and with no obligation to make corresponding changes in products previously manufactured.

LEGAL REMEDIES OF PURCHASER

No action to enforce this Crown Warranty shall be commenced after expiration of the warranty period.

THIS STATEMENT OF WARRANTY SUPERSEDES ANY OTHERS CONTAINED IN THIS MANUAL FOR CROWN PRODUCTS. 9/07



Crown Factory Service Information

Shipping Address: Crown Factory Service, 1718 W. Mishawaka Rd., Elkhart, IN 46517

PLEASE PRINT CLEARLY

SRA #: _____ (If sending product to Crown factory service.) Model: _____
Serial Number: _____ Purchase Date: _____

PRODUCT RETURN INFORMATION

Individual or Business Name: _____
Phone #: _____ Fax #: _____
E-Mail: _____

Street Address (please, no P.O. Boxes): _____

City: _____ State/Prov: _____
Postal Code: _____ Country: _____

Nature of problem: _____

Other equipment in your system: _____

If warranty is expired, please provide method of payment. Proof of purchase may be required to validate warranty.

PAYMENT OPTIONS

I have open account payment terms. Purchase order required. PO#: _____ COD

Credit Card (Information below is required; however if you do not want to provide this information at this time, we will contact you when your unit is repaired for the information.)

Credit card information:

Type of credit card: MasterCard Visa American Express Discover

Type of credit card account: Personal/Consumer Business/Corporate

Card # _____ Exp. date: _____ * Card ID #: _____

* Card ID # is located on the back of the card following the credit card #, in the signature area. On American Express, it may be located on the front of the card. This number is required to process the charge to your account. If you do not want to provide it at this time, we will call you to obtain this number when the repair of your unit is complete.

Name on credit card: _____

Billing address of credit card: _____



CROWN

H Harman International